Straightpoint (UK) Limited

World Leaders In Load Monitoring Technology

Workshop Manual For:

Loadlink plus
Miniweigher plus
Loadblock plus

PCB Snap Offs

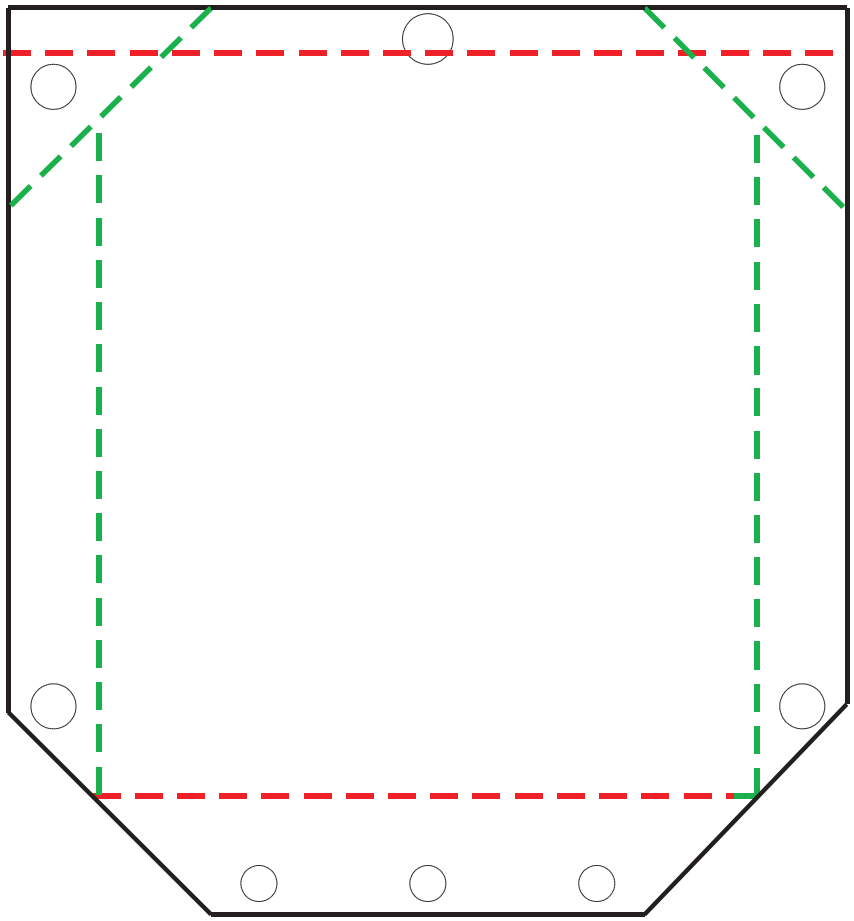

Loadlink plus,
Miniweigher plus 2t & 5t,
Loadblock plus 2t & 5t
snap the PCB along the GREEN LINES

Miniweigher plus 100kg, 250kg, 500kg &1000kg
Loadblock plus 100kg, 250kg, 500kg & 1000kg
Handheld plus
snap the PCB along the RED LINES.

Connections

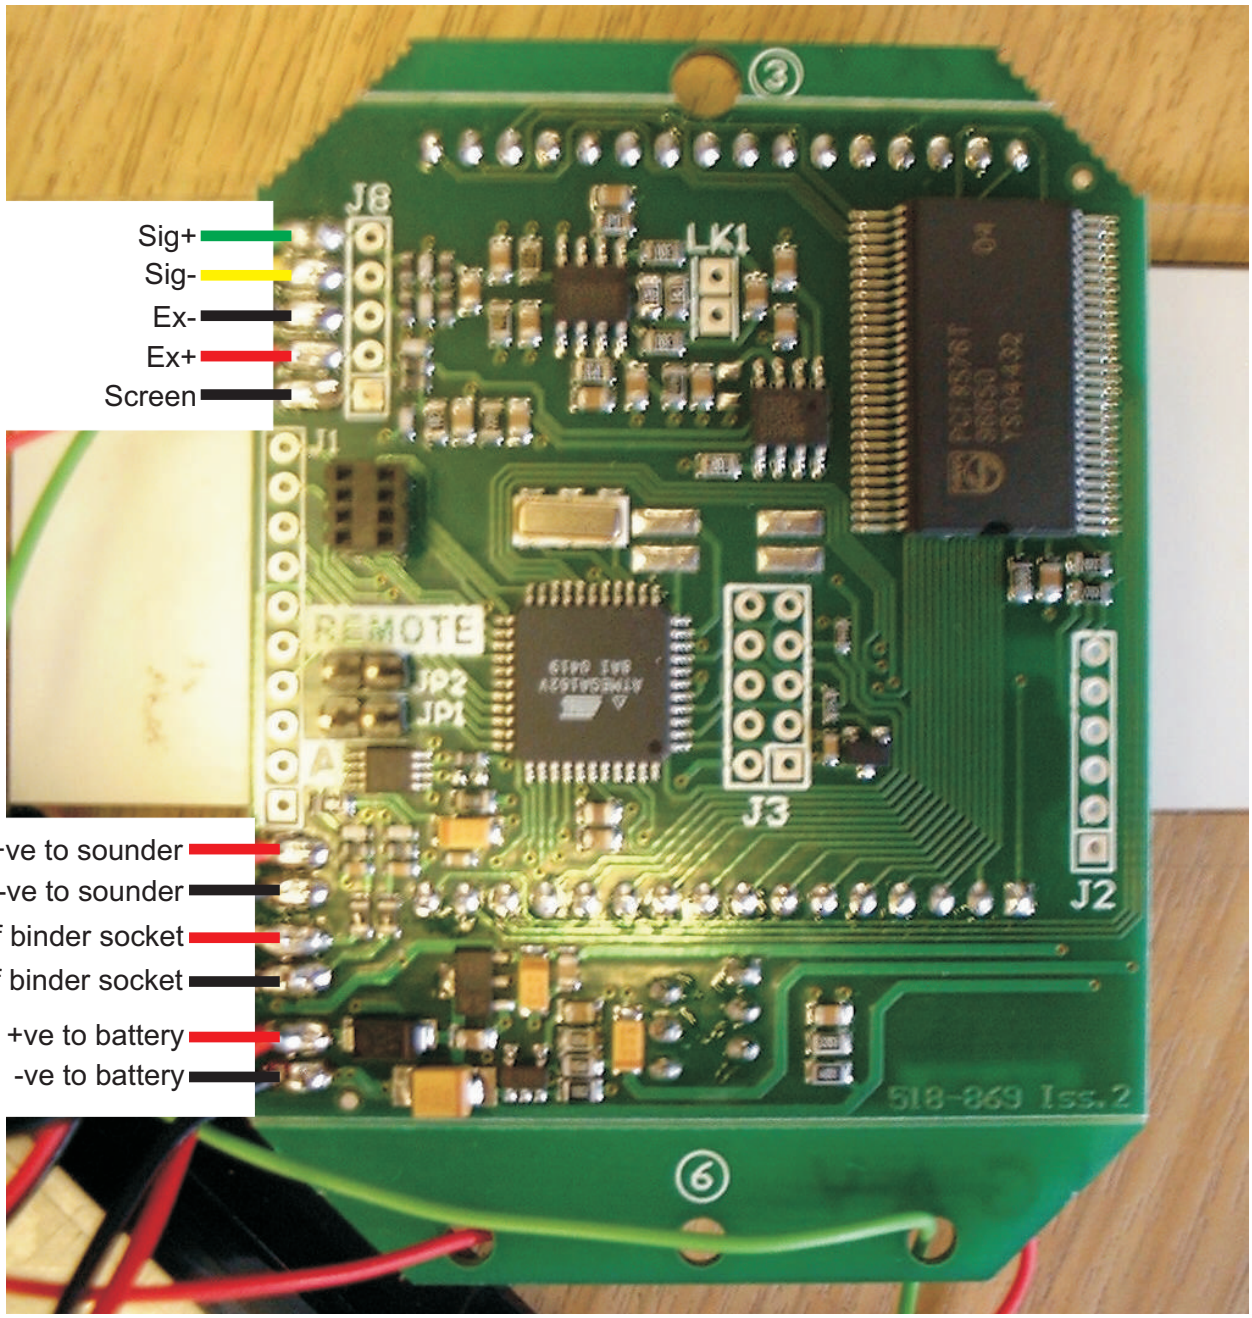

Computer Set Up

First Select ‘loadlink’ on the rotary switch. Plug the comms cable from the PC into the loadcell.

Now double click ‘loadlink’ icon on PC - you will see this screen:

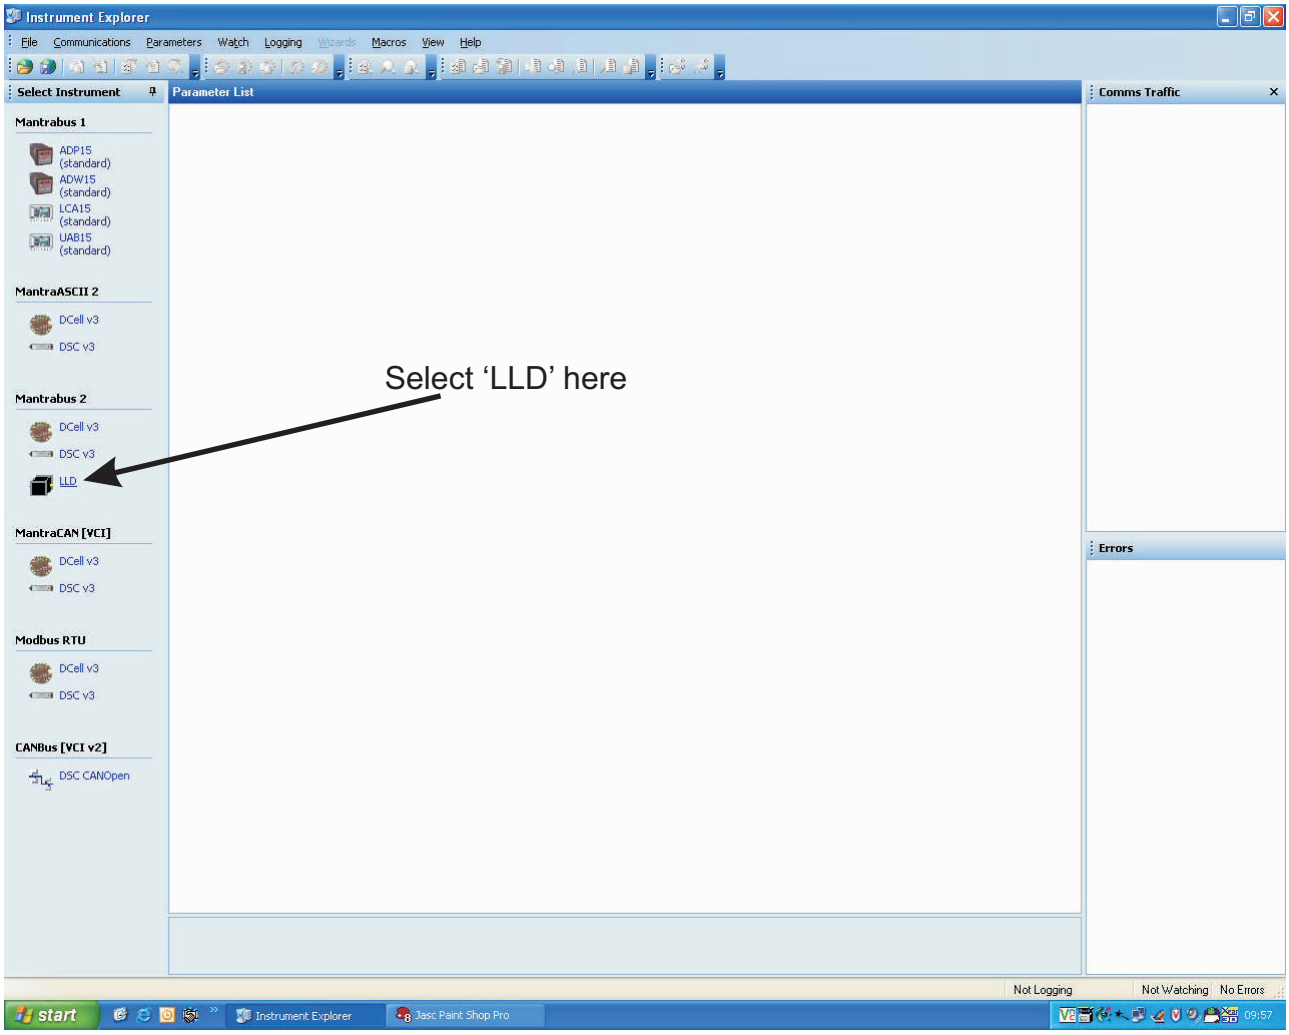

When the ‘instrument setup’ screen appears select ‘DTR Line Hi’

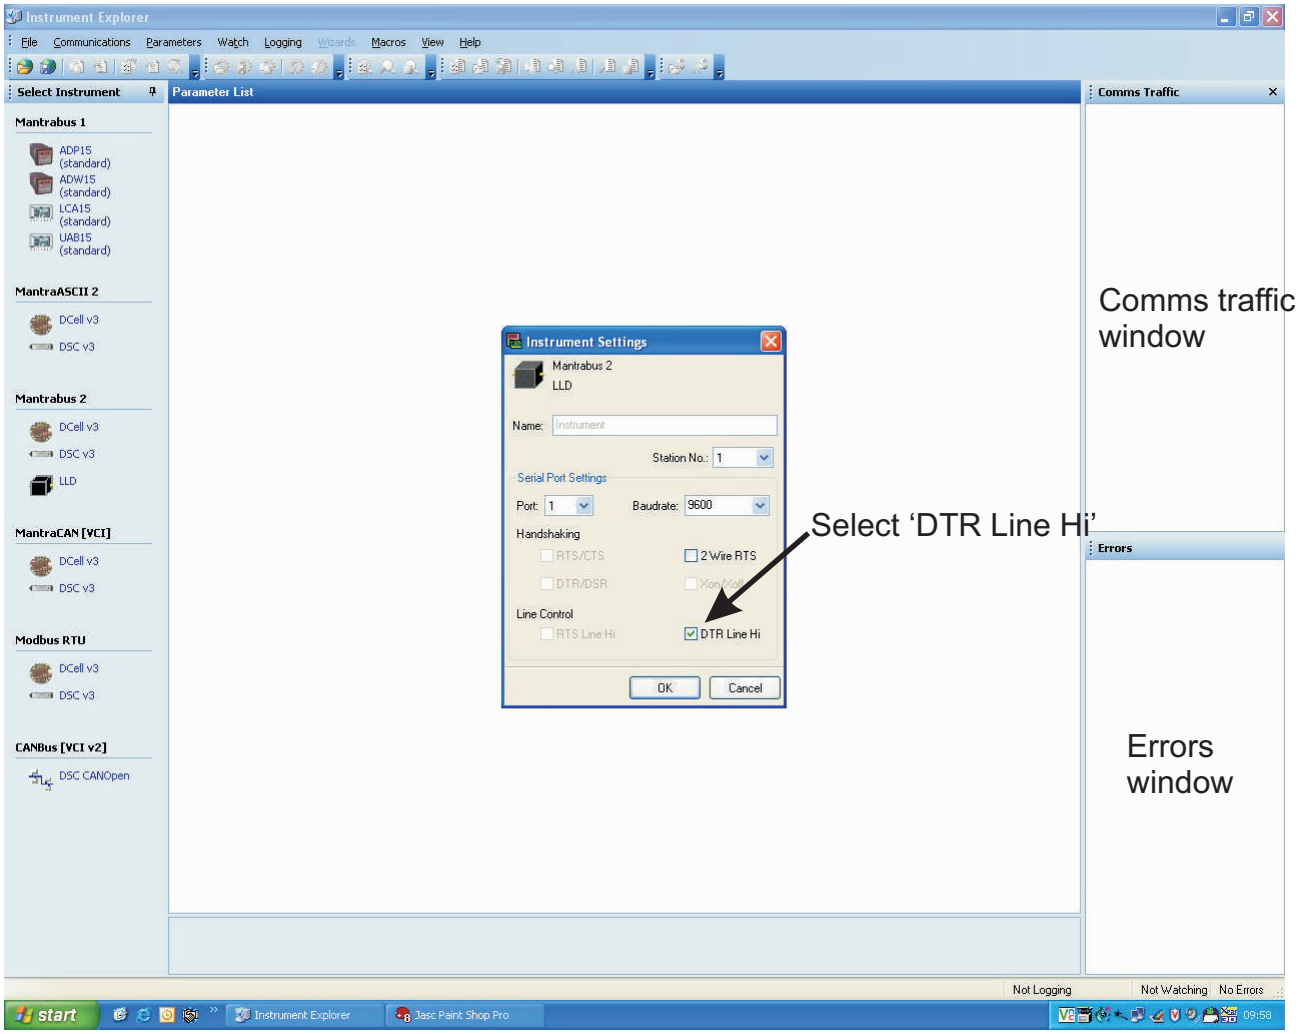

If you have sucessfully connected to the loadcell the ‘comms trafic’ screen will show communication and no errors will be reported in the ‘errors’ window.

select the ‘open parameter’ button

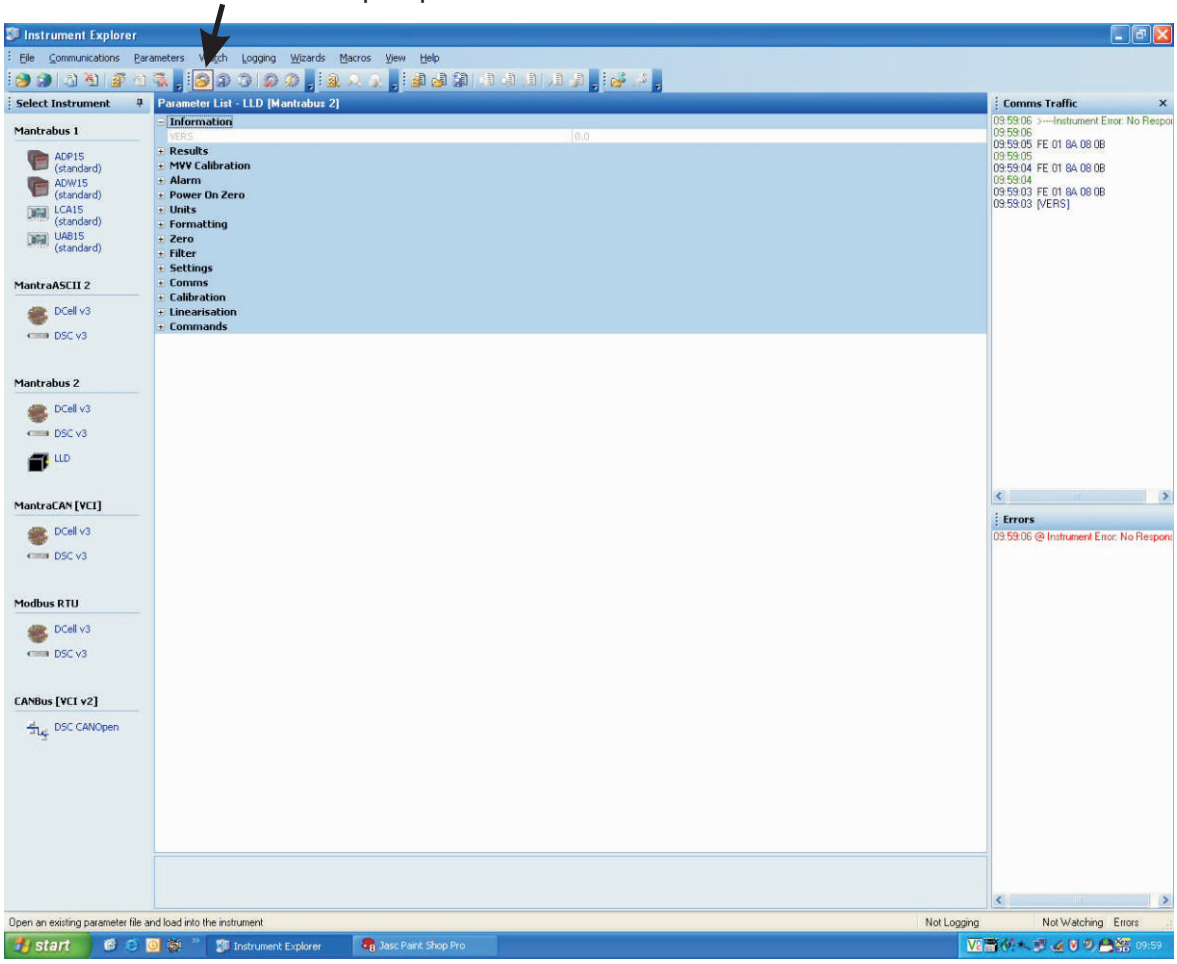

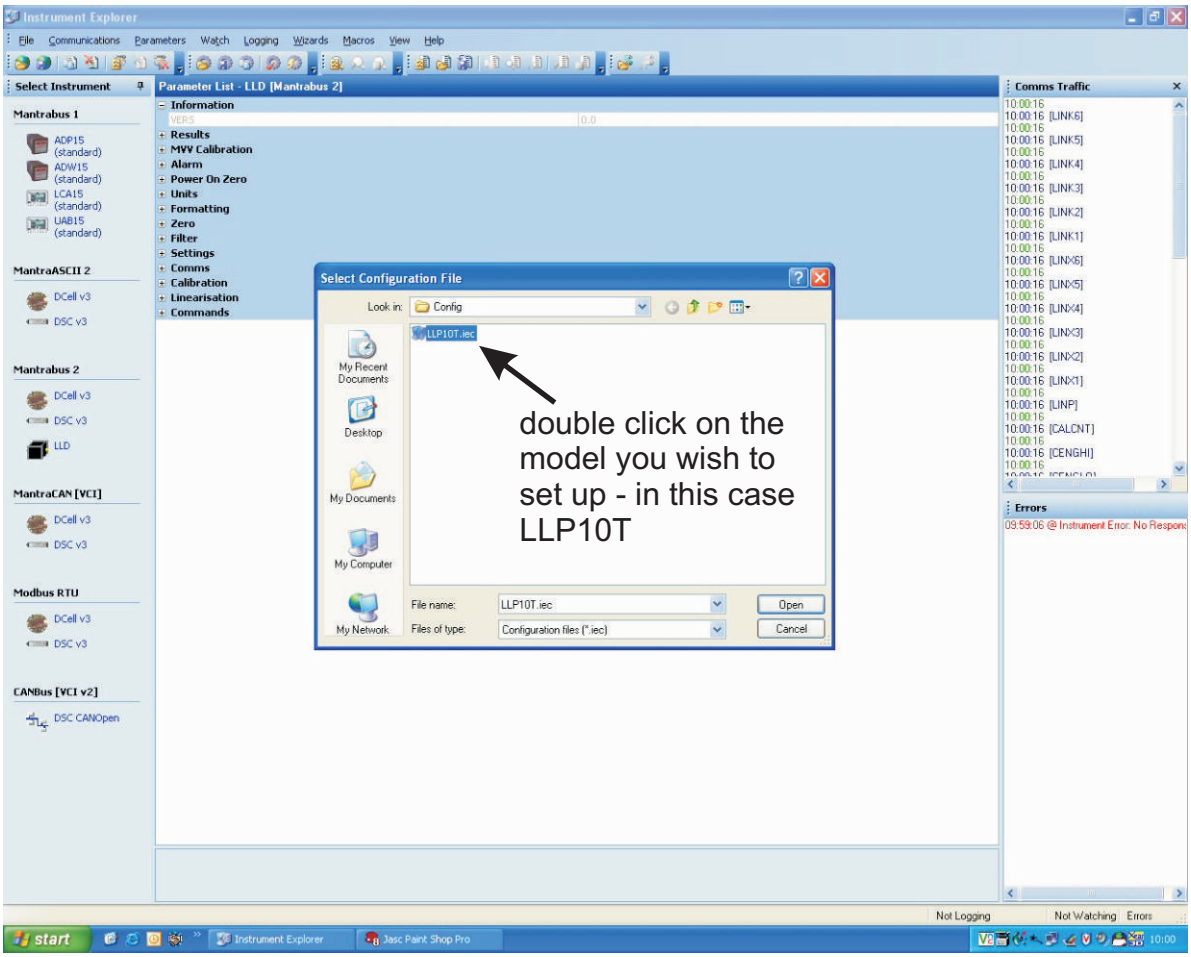

Calibration

Now select ‘wizards from the menu and choose ‘user calibration’ and linearisation.

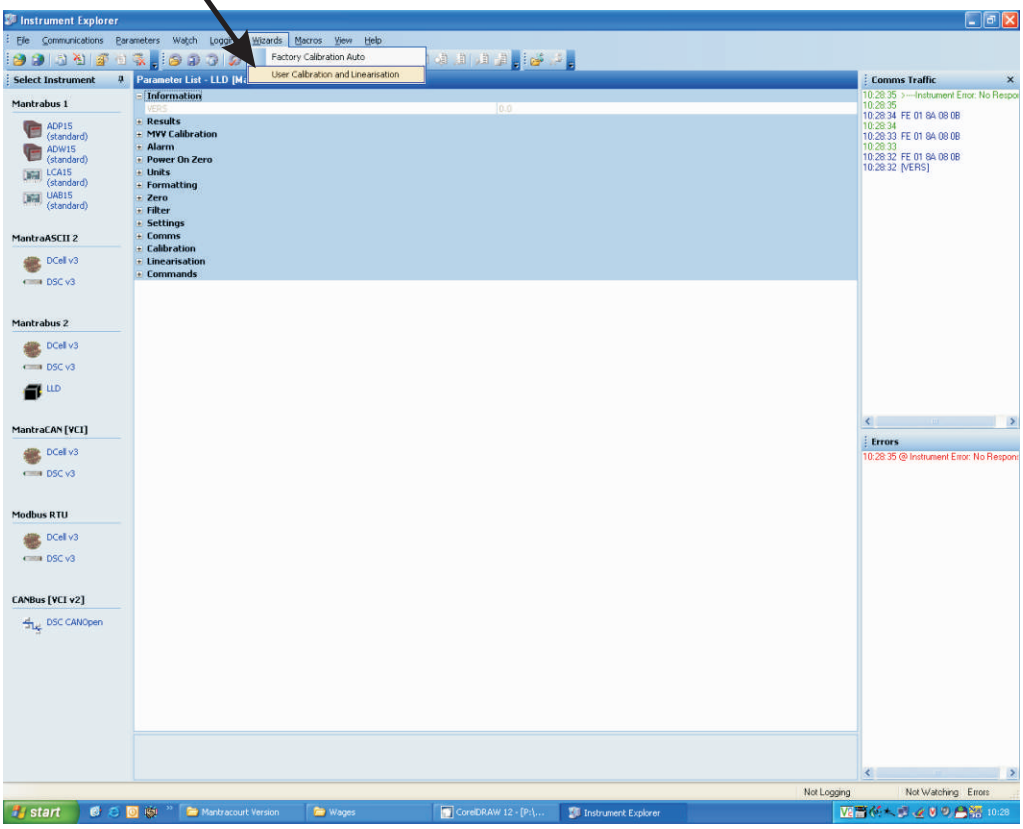

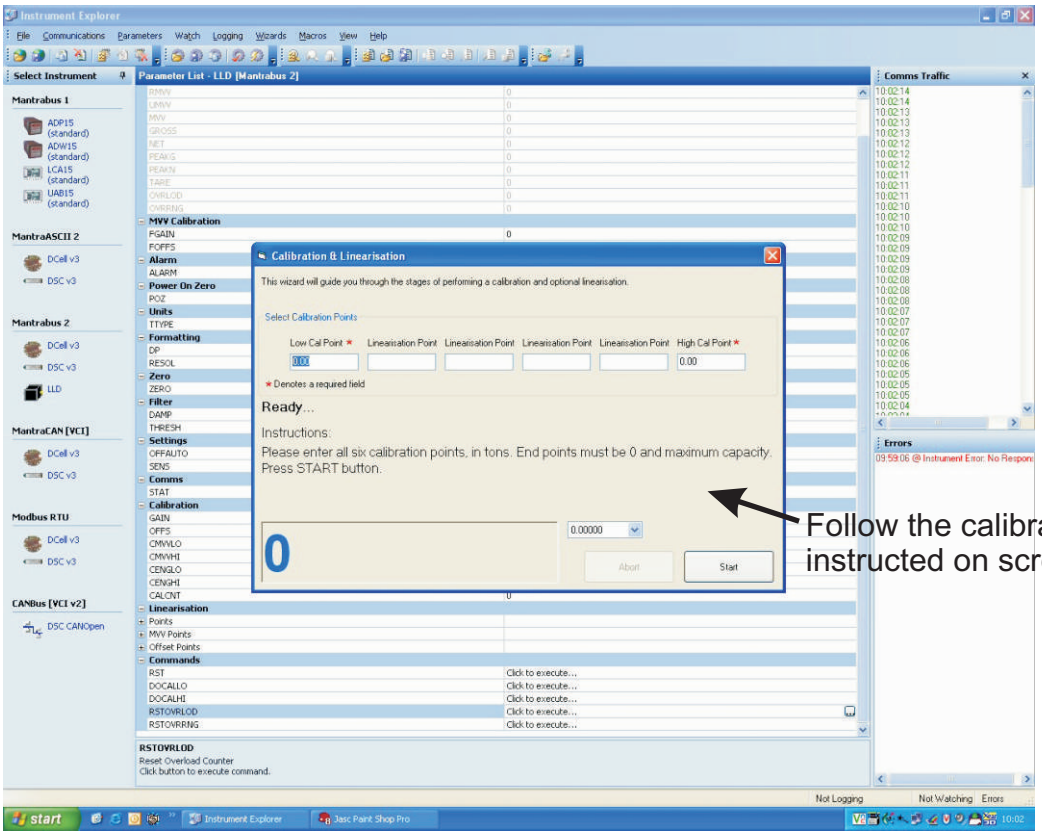

Follow the calibration wizard as instructed on screen.

Overload Reset

Lastly, before disconnecting it is important to reset the ‘overload counter’ to zero before despatch.

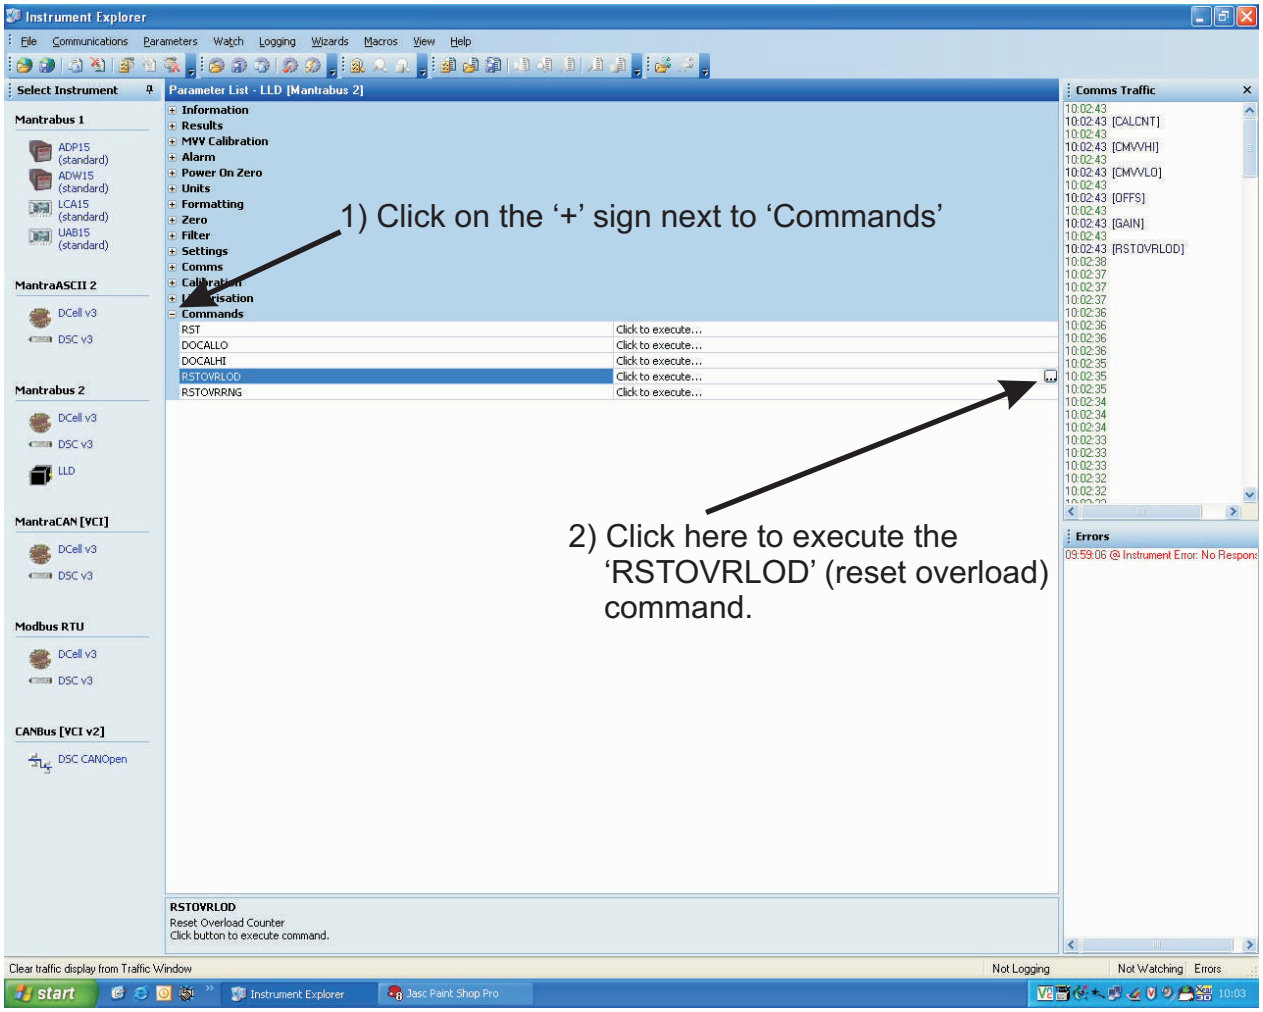

Shut down the software and disconnect comms cable, the loadcell is fully programmed and calibrated.